

Register your product
and get support at
www.philips.com/welcome

SRP4004/27



EN	User Manual	3
ES	Instrucciones de manejo	15
FR	Mode d'emploi	29

PHILIPS

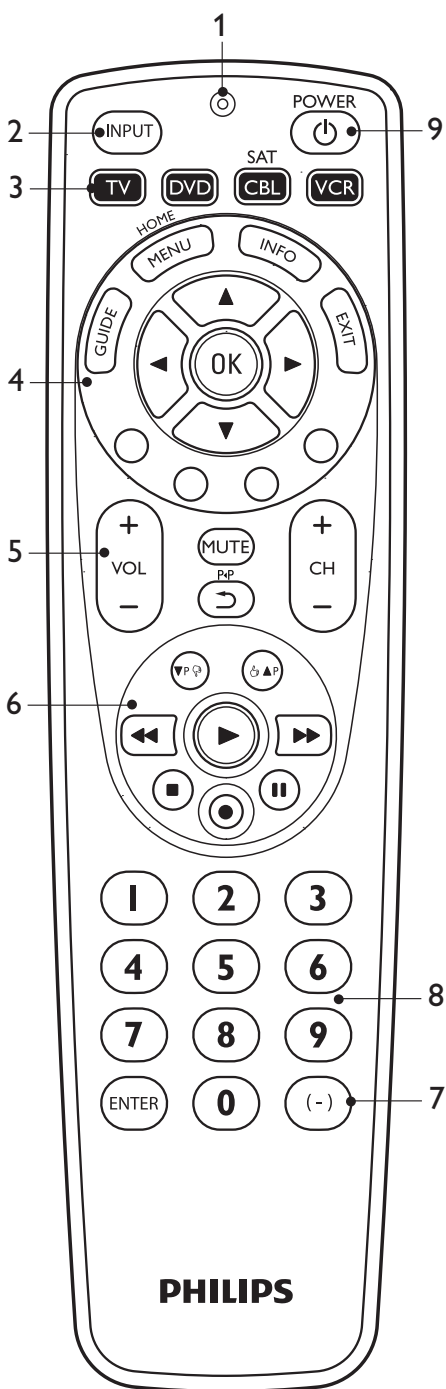


Table of contents

English

Your SRP4004

1	Your SRP4004	3
2	Getting started	4-9
	2.1 Inserting the batteries	4
	2.2 Testing the universal remote control	4-5
	2.3 Setting up the universal remote control	5-9
3	Using the universal remote control.....	9-11
	3.1 Keys and functions.....	9-11
	3.2 Resetting a key to its original function.....	11
4	Service and support	12-14
	4.1 Frequently asked questions.....	12-13
	4.2 Need help?	14
	FCC Compliancy.....	14
	Notice for Canada	14
	Helpline	43
	Brand list.....	44-55

1 Your SRP4004

Congratulations on your purchase of the Philips SRP4004 universal remote control. After setting up the remote control you can operate up to 4 different devices with it.

Simple Setup

Improved with Philips patented (pending) Simple Setup technology, the SRP4004 can be set up easily for TV, DVD player / recorder, VCR and all common Cable, Satellite and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, Tivo and many more.

Simply follow the instructions in chapter **2.3** to set up the remote control for your devices.

Glow keys


The remote control glow keys (-VOL +, - CH +, ENTER, (-) and the numeric keys) light up in the dark, enabling easy use of the remote control, even in a dimly lit room

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

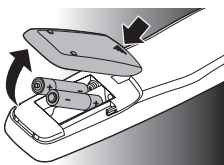


Note

When replacing the batteries, all user settings will be retained in the remote control memory for an unlimited period of time.

2.2 Testing the universal remote control


It is advised to test whether your device(s) already respond(s) to the SRP4004 before setting it up (see chapter 2.3). The example below instructs you how to do this for your TV. You can repeat the same steps for other devices (DVD player/recorder, Cable/Satellite box and VCR) which you want to operate using the SRP4004.

Example: testing the universal remote control on your TV:

- 1 **Switch ON** your TV manually or use the original remote control for this. Tune to channel 1.
- 2 Press the  device selection key to select TV.
 - The key lights up.
 - If the key does not light up, check whether the batteries are properly inserted (see chapter 2.1).



- 3 Check whether the keys that you need for operating your TV are working. For an overview of the keys and their functions see chapter 3.1.

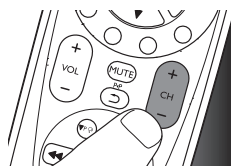

- If the TV responds as it should to all of the key commands, the SRP4004 is ready for use.
- ***If the device does not respond at all or not to all of the key commands, follow the instructions in chapter 2.3.***

2.3 Setting up the universal remote control

This is only necessary if your device does not respond to the SRP4004. If that is the case, the SRP4004 does not recognize the brand and / or model of your device and you need to set up the remote control to do so.

The example below instructs you how to do this for your TV. You can repeat the same steps for other devices (DVD player/recorder, Cable/ Satellite box and VCR) which you want to operate, using the SRP4004.



The remote control can be set up to operate any 4 of the following devices:

Device name	Description
TV	Traditional TV, flat screen TV and projection TV, TV part of TV / VCR, TV / VCR / DVD and TV / DVD combos
DVD	DVD player / recorder (DVDR), DVD / Hard Disk Drive combination (DVDR-HDD), Blu-Ray player, High Definition DVD player (HD-DVD), DVD part of TV / DVD, TV / VCR / DVD and VCR / DVD combos

CBL/SAT	Cable box, satellite receiver; Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV) and Tivo
VCR	Video cassette player / recorder; Personal video recorder (PVR), VCR part of TV/VCR, TV/VCR/DVD and VCR/DVD combos

Example: setting up the universal remote control to operate your TV:

- 1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

- 2 **Press and hold** the  device selection key **for 5 seconds** until the red Setup light  remains lit.


- The remote control is now in setup mode.



 
- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.

A 4-digit code is shown for each brand.


Use the digit keys to enter the code for your brand (e.g. Philips, **2 1 9 5**).

- If the red Setup light  turns off, an invalid code was entered. In this case, try again.



- 4 Aim the remote control at the TV. **Press and hold** the  key. Release it **immediately** as soon the TV switches off.

- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

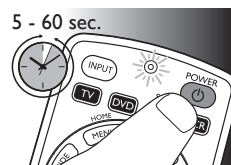

5 Switch ON the TV.

Try out the keys you need for operating it. Try, for example, if the - CH + and digit



- If a key does not work as expected, **press and hold** that key. Release it **immediately** as soon as it works. For more information, see chapter 2.3.2.


6 Press the device selection key **twice** to finish setup.

- When no key is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.






Important

If you made a mistake:

- Press the device selection key **twice** to exit setup. The red Setup light  turns off.
 - Restart from the beginning.
- *If the device does not respond at all or not to all of the key commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.3.1 Setting up the remote control for other devices (DVD player/recorder, Cable/Satellite box and VCR)

- 1 Make sure the device is turned on, fully operational and able to respond to remote control commands. E.g. insert a disc in the DVD player / recorder or a video cassette in the VCR.
- 2 Then follow steps 2 to 6 of 'Setting up the remote control for your TV'. Make sure to use the correct device selection key: ,  or .

2.3.2 Improving keys

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some keys do not yet function as expected. In this case you can have the remote control search for alternatives.






Note


Improving keys is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play key for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play key is not able to function.
- 2 Press the key that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every key that does not function.
 - If the key still does not function as expected, try pressing it again for a longer period of time.

After initial setup

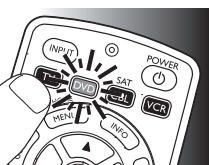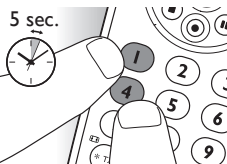- 1 Make sure the receiving device is able to respond.
E.g. when you try to repair the Play key for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play key is not able to function.
- 2 Select the device that you wish to operate (e.g. DVD). Press the **[DVD]** device selection key to select DVD.
- 3 Keep keys **[1]** and **[4]** pressed simultaneously for 5 seconds.
 - The red Setup light  lights up. The remote control is now in setup mode.

- 4 **Press and hold** the key that does not function and **immediately** release it when the device responds.
 - If the key still does not function as expected, try pressing it again for a longer period of time.
- 5 Press the  device selection key **twice** to save your settings and exit setup mode.
 - When no key is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



3 Using the universal remote control








3.1 Keys and functions

The illustration on page 2 gives an overview of all keys on the remote control. Try out the keys you need for operating your devices.



Notes

- Keys having the same functions as the keys on your original remote control may have different namings on the SRP4004 (e.g. Info / Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP4004.

- 1  Setup light. Lights up red when the remote control is in setup mode.
- 2  selects available source inputs (antenna, cable, etc.).
- 3      device selection keys.
 - select the device to be operated.
 - light up when a remote control command is being sent.

4



GUIDE electronic program guide.

MENU / HOME ... menu on / off.

INFO on-screen channel information.

EXIT exits / clears on-screen menu displays.

▲ ▼ ◀ ▶ cursor up, down, left, right in a menu.

OK confirms your selection.

Colored keys Content sensitive keys.

5



+ VOL - adjusts TV volume.

MUTE mutes TV sound.

◀ ▶ previous program / Last.

+ CH - previous / next channel.

6



▼P ▲P previous (▼P) / next (▲P) page / track in various modes.

👍 / 👎 set your Thumb ratings.

◀◀ rewind.

▶ play.

▶▶ fast forward.

■ stop.



● record.

|| pause.

7

ENTER used after direct channel selection. Some devices require ENTER to be pressed after channel selection.

(-) selects between one and two-figure channel numbers.

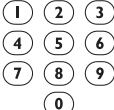- 8  digit keys for direct channel / track selection.
- 9  switches the selected device on / off.


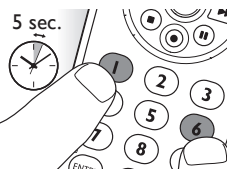





Note

For some TV brands / types, this key will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

3.2 Resetting a key to its original function

If an improved key (see chapter 2.3.2) still does not function as expected, you can always reset the key to its original function.

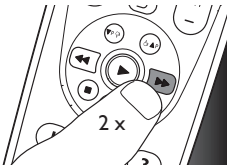- 1 In the current device mode, keep digit keys ① and ⑥ **pressed simultaneously for 5 seconds**, until the red Setup light  lights up.
 - The remote control is now in setup mode.
- 2 Press digit keys ⑨, ⑨, and ⑥, in that order.
 - After each key press the device selection key blinks once.
- 3 Press the key that you wish to reset **twice**. E.g. the  key.
 - After each key press the device selection key blinks once.
 - The device selection key will blink one more time to confirm that the key was successfully reset to its original function.

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV, DVD, CBL/SAT and VCR brands.

- You will find a complete brand list on page 44-55 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit keys. After a long key press in setup mode the remote control will start trying to improve the key (see chapter 2.3.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long key press on one of the digit keys, just as your original remote control.

After setup, not all keys work as expected.

- Try improving the key(s). See chapter 2.3.2.

How do I set the remote control for combo devices (TV / VCR, TV / DVD, DVD / VCR, etc)?

Some combo devices require you to set up two different source selection keys to control both parts of the combo device. For example, if you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

The device I want to operate does not respond at all / does not respond to all of the key commands.

- Check if the keys you press are available on the original remote control of the device.
- Try improving keys. See chapter 2.3.2.

Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode. See chapter 2.2.

It may be that the keys that you are trying to use have a different naming on the original remote control.

- Try out all keys to find the one(s) you need.

Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory during battery replacement.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP4004, you can always contact us.

When calling our helpline, make sure to have the SRP4004 at hand when you call, so that our operators can help you determine whether the SRP4004 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP4004/27.

Date of purchase:

...../...../.....

(day/month/year)

For **online support** go to: www.philips.com/welcome.

- Click 'Support' and follow the on-screen instructions.

FCC Compliancy

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.



Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice for Canada / Remarque pour le Canada

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.



Helpline

Country	Phone number	Tariff
United States of America / Canada	1 800 233 8413	free

Helpline

A

A.R. Systems..... 0012
ABC..... 0013
Abex 0014
ABS..... 0016
Accele Vision 4194
AccessHD 3554
Accurian..... 0022
Acer..... 0028
Acura..... 0036
Addison..... 0043
Adelphia..... 4195
Admiral..... 0046
Advent..... 0054
Adventura..... 0055
Adyson..... 0058
Agashi..... 0063
AGB..... 0064
Aiko..... 0069
Aim 0070
Aiwa 0072
Akai..... 0074
Akiba..... 0078
Akito..... 0082
Akura..... 0083
Alaron..... 0085
Alba 0086
Albatron..... 0087
Alco 0092
Alienware 0099
Allegro..... 0103
Alleron..... 0104
Allorgan..... 0105
Allstar..... 0108
Alpha Digital 4014
Alphastar..... 0113
Alpine 0114
America Action.... 0123
American High..... 0125
Americast..... 0127
Amphion MediaWorks
..... 0135
Amplivision..... 0138
Ampro..... 0139
Amstrad..... 0140
Amtron..... 0141
AMW..... 0143
Anam..... 0146

Anam National.... 0147
Anglo 0151
Anitech 0154
Ansonic..... 0156
Antronix..... 0159
AOC..... 0165
Apache..... 0169
Apex 3691
Apex Digital..... 0170
Apple 0172
Arcam..... 0179
Archer 0180
Archos..... 0181
Ardem..... 0184
Aristona..... 0192
Arrgo 0197
Artec..... 4016
Asberg..... 0205
Asha..... 0209
Aspire 4233
Astar..... 0218
Asuka..... 0227
AT&T 3453
Atlantic..... 0233
Atori..... 0237
Audio Dynamics.. 0248
Audiosonic..... 0264
AudioTon..... 0266
Audiovox..... 0268
Autovox 0280
Aventura 0287
Awa 0296
Axion..... 0299

B

Baird 0311
Bang & Olufsen... 0314
Basic Line..... 0325
Bastide..... 0327
Baur 0331
Bazin 0335
BBT 0338
Beaumark..... 0340
Beijing 0345
Beko 0346
Belcor 0348
Bell & Howell 0350
Bell South 0353
Benq..... 0359

Beon.....	0361	Cathay.....	0501
Best.....	0364	CCE.....	0504
Bestar.....	0368	Celebrity.....	0509
Bestar-Daewoo ...	0369	Celera.....	0510
Binatone.....	0378	Centurion.....	0520
Black Star.....	0386	Century.....	0521
Blacktron.....	3526	CGE.....	0523
Blackway.....	0388	Changcheng.....	0526
Blaupunkt.....	0390	Changfei.....	0527
Blue Parade.....	0394	Changhai.....	0529
Blue Sky.....	0395	Changhong.....	0530
Blue Star.....	0396	Channel Master....	0531
Bondstec.....	0403	Chaparral.....	0533
Boots.....	0405	Ching Tai.....	0541
BOSS.....	4197	Chun Yun.....	0545
BPL.....	0413	Chunfeng.....	0546
Bradford.....	0414	Chung Hsin.....	0547
Brandt.....	0416	Chunsun.....	0549
Brilliant.....	0422	Cimline.....	0552
Brinkmann.....	0423	CineVision.....	0562
Brionvega.....	0424	Citizen.....	0567
Britannia.....	0425	City.....	0569
Brockwood.....	0430	Clarion.....	0575
Broksonic.....	0432	Clarivox.....	0576
BSkyB.....	0436	Clatronic.....	0581
BTC.....	0439	Clearmaster.....	0583
Bush.....	0445	ClearMax.....	0584
byd:sign.....	0448	CMS.....	0590
C		CMS Hightec.....	0591
Cable Star.....	0454	Coby.....	0597
Cable Vision.....	4198	Colortyme.....	0601
Cabletenna.....	0456	Colour Voice.....	0602
Cableview.....	0458	Colt.....	0603
Caihong.....	0462	Comcast.....	3456
California Audio Labs		Commercial Solutions	
.....	0467	0615
Calix.....	0468	Comtronics.....	0623
Candle.....	0480	Concerto.....	0625
Canon.....	0481	Concorde.....	0626
CaptiveWorks.....	0487	Condor.....	0627
Carad.....	0488	Conrowa.....	0634
Carena.....	0489	Contec.....	0635
Carnivale.....	0491	Contec/Cony.....	4199
Carrefour.....	0492	Coolmax.....	0642
Carver.....	0494	Coolsat.....	0643
Cascade.....	0496	Coship.....	0646
Casio.....	0499	Cosmel.....	0647
Catha.....	4094	COX.....	4200

Craig.....	0650	Drean.....	0832
Crosley.....	0655	DSE(Digital).....	0833
Crossdigital.....	0656	DTS.....	0837
Crown.....	0658	Dual.....	0838
CS Electronics.....	0663	Dual-Tec.....	3528
CTC.....	0664	Dumont.....	0840
CTX.....	0665	Durabrand.....	0842
Curtis Mathes.....	0667	Dux.....	0843
CXC.....	0670	DVD2000.....	0844
CyberHome.....	0672	D-Vision.....	0684
Cybernex.....	0673	Dwin.....	0848
CyberPower.....	0674	Dynatech.....	0854
Cybertron.....	0675	Dynatron.....	0855
Cytron.....	0680	Dynex.....	3476
D		E	
Daeryung.....	0691	Eastern.....	0859
Daewoo.....	0692	Echostar.....	0866
Dainichi.....	0694	Eclipse.....	0867
Dansai.....	0699	Eiki.....	0874
Dantax.....	0702	Elbe.....	0880
Davidson.....	4202	Elbe-Sharp.....	3529
Dawa.....	0707	Elcit.....	0883
Daytron.....	0710	Electroband.....	0888
DBX.....	0712	Electrograph.....	0889
Decca.....	0718	Electrohome.....	0890
Deitron.....	0722	Electroponic.....	0893
Dell.....	0725	Elektra.....	0896
Denon.....	0731	Element.....	3477
Denver.....	0733	ELG.....	0900
Desay.....	0737	Elin.....	0902
Desmet.....	0738	Elite.....	0903
Diamant.....	0746	Elman.....	0907
Diamond.....	0747	Elta.....	0910
Diamond Vision....	0748	Emerson.....	0917
Digatron.....	0751	Emperor.....	0921
Digi.....	0754	Emprex.....	0922
Digiline.....	0759	Enterprise.....	0931
Digital Stream.....	3809	Envision.....	0933
Dimensia.....	3569	Epson.....	0937
Director.....	0793	Erres.....	0942
DIRECTV.....	0794	ESA.....	0943
Dish Network.....	3966	ESC.....	0945
Dishpro.....	0800	Ether.....	0948
Disney.....	0803	Etron.....	0949
Dixi.....	0807	Eurofeel.....	0954
DongDa.....	0820	Euroman.....	0956
Donghai.....	0821	Europa.....	0957
Drake.....	0825	Europhon.....	0959

Everquest.....	0971	GFM.....	3820
Expressvu	0977	Giant.....	1113
Exquisit.....	0978	Gibralter.....	1114
F		Go Video.....	1126
Fagor Life.....	4102	GOI.....	1130
Feilang.....	0990	Goldhand.....	1136
Feilu	0991	Goldline.....	1138
Feiyue	0993	GoldStar.....	1140
Fenmenti.....	4103	Goldstar	1140
Fenner	0994	Goodmans.....	1142
Ferguson	0996	Goodmind	1143
Fidelity	0998	GPM	1149
Filsai	1000	Gradiente	1151
Finlandia.....	1003	Graetz	1152
Finlux.....	1004	Granada.....	1154
Firstar.....	1007	Grandin.....	1156
Firstline.....	1008	Greenhill	1157
Fisher.....	1009	Gronic	1160
Flint	1014	Grundig.....	1162
FNR	1016	Grunpy.....	1165
Focus.....	1017	H	
Formenti	1023	Haier	1175
Formenti-Phoenix	1024	HaiHong.....	1176
Fraba	1030	Halifax	1179
Friac	1040	Hallmark.....	1180
Frontech.....	1042	Hamlin.....	1182
Fuji.....	1047	Hampton	1183
Fujitsu.....	1052	Hankook	1188
Fujitsu General	1053	Hanseatic.....	1190
Funai	1056	Hantarex.....	1192
Furi	1057	Hantor.....	1193
Futuretech.....	1064	Harley Davidson..	1197
G		Harman/Kardon...	1198
Galaxi.....	1068	Harvard.....	1202
Galaxis.....	1069	Harwood.....	1204
Garrard.....	1075	Hauppauge	1206
Gateway.....	1076	Havermy.....	1208
GBC.....	1078	HCM	1210
GC Electronics.....	1080	Headquarter.....	1214
GE.....	1081	Hello Kitty	1221
GEC.....	1083	Hema.....	1222
Gehua.....	1086	Hemmermann.....	1223
Geloso.....	1087	Hewlett Packard..	1229
Gemini.....	1089	Higashi.....	1234
General Instrument		Highline.....	1236
.....	1093	Hikona.....	1237
General Technic ...	1095	HiLine	3533
Genexxa	1097	Hinari.....	1243

Hisawa.....	1247	Innova.....	1359
Hisense	1249	Insignia.....	1368
Hitachi.....	1251	Instant Replay.....	3580
Hitachi Fujian.....	1252	Integra.....	1370
Hiteker.....	1255	Inteq.....	1373
Hitsu.....	1257	Interbuy.....	1376
Hoehner.....	1262	Interfunk.....	1377
Hongmei.....	1272	Internal.....	1379
Hornyphone.....	1277	International.....	1380
Hoshai.....	1278	Intervision.....	1386
Howard Computers		IR.....	4110
.....	1281	Irradio.....	1396
HP.....	1283	Isukai.....	1402
HTS.....	1285	iSymphony.....	3755
Huafa.....	1287	ITC.....	1404
Huanghaimei.....	1288	ITS.....	1405
Huanghe.....	1289	ITT.....	1406
Huanglong.....	1290	ITV.....	1408
Huangshan.....	1291	J	
Huanyu.....	1292	Janeil.....	1414
Huari.....	1294	Jasco.....	1415
Hughes.....	4205	JBL.....	1420
Hughes Network		JC Penney.....	4208
Systems.....	1296	JCB.....	1421
Humax.....	1298	JCL.....	4209
Hush.....	1304	Jean.....	1424
Hygashi.....	1308	Jensen.....	1429
Hyper.....	1309	Jerrold.....	1431
Hypson.....	1312	Jinxing.....	1442
Hytex.....	1314	JVC.....	1464
Hyundai.....	1315	Jwin.....	1465
I		K	
Iberia.....	1320	Kaisui.....	1471
iBUYPOWER.....	1322	Kamp.....	1475
ICE.....	1324	Kanghua.....	1477
ICeS.....	1325	Karcher.....	1484
Illico.....	4206	Kawa.....	1487
Ilo.....	1341	Kawasaki.....	1488
iLuv.....	4234	Kawasho.....	1489
IMA.....	1342	Kaypani.....	1490
Imperial.....	1346	KEC.....	1496
Indiana.....	1350	Kendo.....	1500
Infinity.....	1352	Kenwood.....	1507
InFocus.....	1353	KIC.....	1512
Ingelen.....	1354	Kingsley.....	1520
Ingersol.....	1355	Kiota.....	1522
Initial.....	1356	Kioto.....	1523
Inno Hit.....	1358	Kiton.....	1525

KLH.....	1529	M	
Kloss Novabeam.....	4210	M & S.....	1687
Kneissel.....	1535	Madison.....	1698
Kodak.....	1540	Magnadyne.....	1702
Kolin.....	1541	Magnafon.....	1703
Kolster.....	1543	Magnasonic.....	1704
Konig.....	1547	Magnavox.....	1706
Konka.....	1548	Magnin.....	1708
Korpel.....	1552	Magnum.....	1709
Korting.....	1554	Majestic.....	1713
Kosmos.....	1557	Manesth.....	1718
Koss.....	1558	Manhattan.....	1719
KTV.....	1572	Marantz.....	1724
Kyoshu.....	1583	Mark.....	1731
Kyoto.....	1585	Marta.....	1735
L		Masuda.....	1744
L&S Electronic.....	1588	Matsui.....	1750
Landel.....	1593	Matsushita.....	1751
Lasonic.....	1600	Maxent.....	1757
Layco.....	4117	Media Center PC	
Lecson.....	1606	1777
Lenco.....	1615	Mediator.....	1784
Lenoir.....	1617	Medion.....	1787
Lenoxx.....	1618	Medison.....	1788
Lesa.....	1622	MegaCable.....	4211
Lexicon.....	1625	Megapower.....	1791
Leyco.....	1627	Megatron.....	1795
LG.....	1628	MEI.....	1796
Liesenk & Tter.....	1630	Melectronic.....	3654
Liesenkotter.....	1631	Memorex.....	1800
Lifetec.....	1633	Memphis.....	1802
Linksys.....	1640	Mercury.....	1804
Linsay.....	1642	Metz.....	1810
Liquid Video.....	1644	MGA.....	1811
Liteon.....	1645	MGN Technology	
Lloyd's.....	1648	1812
Local India TV.....	1653	MicroGem.....	4024
Loewe.....	1660	Micromaxx.....	1822
Loewe Opta.....	3540	Microsoft.....	1826
Logik.....	1661	Midland.....	1831
Luma.....	1674	Minato.....	1835
Lumatron.....	1676	Mind.....	1837
Lux May.....	1680	Minerva.....	1838
Luxman.....	1682	Minoka.....	1840
Luxor.....	1683	Minolta.....	1841
LXI.....	1686	Mintek.....	1845
		Minutz.....	1847
		Mitsubishi.....	1855

Mivar	1857	Noshi	2030
Monivision	1872	Nova Vision	2032
Montgomery Ward	4212	Novaplex	2034
Morgans	3970	Novatronic	2035
Motorola	1878	NSC	2042
Movie Time	1880	NTC	2045
MTC	1889	O	
MTlogic	1892	Oak	2059
Multistandard	1904	Okana	4122
Multitec	1906	Okano	2065
Multitech	1907	Olevia	2067
Multivision	1909	Olympus	2071
Murphy	1911	Onimax	2082
Musikland	1915	Onkyo	2085
N		Onwa	2087
NAD	1926	Opera	2090
Naiko	1930	Oppo	2092
Nakamichi	1932	Optimus	2095
Nakamura	1933	Optoma	2097
NEC	1950	Optonica	2099
Neckermann	1951	Orbit	2103
NEI	1952	Orion	2111
Nesa	1959	Oritron	2112
Nesco	1960	Online	2113
NET Brazil	1962	Orsowe	2116
Netsat	1966	Osaki	2118
NET-TV	1967	Osio	2121
Neufunk	1970	Oso	2122
New Tech	1979	Osume	2123
New World	1980	Otto Versand	2126
Newave	1981	P	
Next Base	1983	Pace	2134
Next Level	1984	Pacific	2135
Nexus	1989	Pael	2140
Nexxtech	1990	Palladium	2145
Nicamagic	1994	Palsonic	2147
Nikkai	1998	Panama	2149
Nikko	2000	Panasonic	2153
Niveus Media	2012	Panasonic/National	2153
Noblex	2013	Panavision	2154
Nobliko	2014	Panda	2155
Nokia	2017	Pansat	2158
Norcent	2020	Panther	2160
Nordic	2021	Paragon	2161
Nordmende	2022	Pathe Cinema	2168
Normerel	2024	Pausa	2171
Northgate	2027	Paysat	2173

PCT.....	4213	Pye.....	2302
Penney.....	2182	Pymi.....	2304
Pentax.....	2183	Q	
Perdio	2185	Quarter.....	2318
Perfekt.....	2186	Quartz.....	2319
Philco.....	2192	Quasar.....	2320
Philharmonic.....	2194	Quelle.....	2322
Philips.....	2195	Questa.....	2324
Philips Magnavox		Qwestar.....	2326
.....	3715	R	
Phoenix.....	2199	Radialva.....	2329
Phonola.....	2201	Radio.....	4128
Phonotrend.....	2202	Radio Shack/Realistic	
Pilot.....	2207	4214
Pioneer	2212	Radiola.....	2330
Pionier	2213	Radiomarelli.....	2331
Plantron.....	2219	RadioShack.....	2333
Plasmsync.....	4230	Radiotone.....	2334
Playsonic.....	2224	Radix.....	2335
Polaroid.....	2230	Randex.....	2343
Polk Audio.....	2232	RCA.....	2351
Poppy.....	2236	Realistic.....	2354
Popular Mechanics		Recor.....	2359
.....	2237	Recoton.....	2361
Portland.....	2238	Rectiligne.....	2362
Powerpoint.....	2241	Redstar.....	2366
Prandoni Prince ...	4125	Reflex.....	2368
Precision.....	2244	Regal.....	2370
Prelude.....	2247	Regency.....	2371
Price Club	2252	Regent.....	2372
Prima.....	2253	Rembrandt.....	2375
Primestar.....	2257	Reoc.....	2379
Princeton.....	2258	ReplayTV	2380
Prinz.....	2260	Revox.....	2383
Prism.....	2261	Rex.....	2385
Proceed.....	2267	RFT.....	2386
Profekt.....	4126	Rhapsody.....	2387
Profex.....	2269	Ricavision.....	2388
Profitronic.....	2273	Rio.....	2393
Proline.....	2274	R-Line.....	2327
Proscan.....	2279	Roadstar.....	2398
Prosonic.....	2282	Rogers.....	4215
Protech.....	2284	Rotel.....	2414
Proton.....	2288	Rowa.....	2416
Protron.....	2289	Runco.....	2423
Proview.....	2290		
Provision.....	2291		
Pulsar.....	2296		

S

Saba.....	2429	Sigma Designs.....	2579
Saisho.....	2437	Signal.....	2581
Saivod.....	2439	Signature.....	2582
Salora.....	2443	Silva.....	2591
Sambers.....	2445	Silva Schneider.....	2592
Sampo.....	2446	Silver.....	2594
Samsung.....	2448	Simpson.....	2598
Sandra.....	2454	Singer.....	2599
Sanky.....	2456	Sinudyne.....	2601
Sansui.....	2458	SKY.....	2610
Sanyo.....	2462	Skygiant.....	2618
Sanyuan.....	2464	SL Marx.....	2633
SBR.....	2492	Sogera.....	2649
Sceptre.....	2498	Solavox.....	2654
Schaub Lorenz.....	2500	Sonawa.....	2663
Schneider.....	2501	Sonic Blue.....	2667
Scientific Atlanta..	2503	Sonicview.....	3954
Scimitsu.....	2505	Soniko.....	2669
Scotch.....	2506	Sonitron.....	2671
Scott.....	2508	Sonneclair.....	2673
Sears.....	2514	Sonoko.....	2675
SEG.....	2522	Sontec.....	2677
SEI.....	2524	Sony.....	2679
SEI-Sinudyne.....	2525	Sound & Vision....	2680
Seleco.....	2528	Soundesign.....	2684
Sencora.....	2531	Soundwave.....	2689
Sensory Science...	2533	Sowa.....	2691
Sentra.....	2534	Squareview.....	2703
Serino.....	2539	Srypton.....	4138
Shanghai.....	2547	SSS.....	2708
Shaofeng.....	2549	Stack.....	4218
Sharp.....	2550	Standard.....	2713
Sharper Image.....	2551	Standard Component	
Shen Ying.....	2552	2714
Shencai.....	2553	Star Choice.....	2716
Sheng Chia.....	2554	Starcom.....	2722
Shenyang.....	2555	Stargate.....	2723
Sherwood.....	2557	Starlite.....	2728
Shinco.....	2560	Starquest.....	2732
Shinsonic.....	2562	StarSight.....	2734
Shintoshii.....	2564	Stenway.....	2739
Shivaki.....	2567	Strato.....	2745
Shogun.....	2568	STS.....	2749
Siam.....	2572	STS1.....	4219
Siarem.....	2573	STS2.....	4220
Siemens.....	2574	STS3.....	4221
Siera.....	2576	STS4.....	4222

Studio Experience	2750	Telefunken.....	2914
Stylandia	2752	Telefusion.....	2915
Sungale.....	2761	Telegazi	2917
Sunkai	2762	Telemeister	2924
Sunstar	2768	Telesonic	2930
Sunwood	2772	Telestar.....	2931
Supercable	2778	Teletech.....	2934
Superla.....	2782	Teleton.....	2935
Supermax.....	2783	Televideon.....	2938
SuperScan	2786	Televue	2939
SuperTech	2789	TeleView	2939
Supervision.....	2791	Tennessee.....	2952
Supra.....	2792	Tensai	2954
Supre-Macy	2794	Tenson.....	2955
Supreme.....	2795	Terapin.....	2958
Sutron.....	2798	Tevion.....	2962
SVA.....	2800	Texet	2963
Sydney.....	2808	Texscan	2965
Sylvania	2809	TFC.....	2967
Symphonic	2810	Theta Digital	2970
Synco	2811	Thomas.....	2971
Syntax.....	2814	Thomson	2972
Syntax-Brilliant.....	4231	Thorn.....	2974
Sysline.....	2815	TIME WARNER...	3518
Systemax.....	2817	Timeless	2985
Sytong.....	2820	Tivax.....	3956
T		Tivo.....	2991
Tacico.....	2823	TMK.....	2994
Tagar Systems.....	2831	TNCi.....	2996
Taishan.....	2835	Tocom	3000
Tandy.....	2843	Tokai	3001
Tashiko	2850	Tokyo	3004
Tatung.....	2852	Tomashi	3006
Teac.....	2860	Torx	3020
Teachimagen	4140	Toshiba.....	3021
Tec.....	2861	Totevision	3024
Tech Line	2863	Touch.....	3025
Techica	2865	Towada	3028
Technema.....	2866	Toyoda.....	3030
Technics.....	2869	Trakton	3036
Techview	2883	Trans Continens..	3037
Techwood	2884	Trans PX	3038
Teco.....	2886	Transfec	4143
TEDELEX	2889	Transonic	3041
Teknika	2895	Transtec.....	3042
Telecaption	2902	Tredex.....	3045
Telecor	2910	Trident.....	3054
		Tristar.....	3057

Triumph.....	3058	ViewStar.....	3187
Trutech.....	3467	Viking.....	3188
TS.....	3063	Villain.....	3189
Tuntex.....	3069	Viore.....	3192
Tusa.....	3073	Visco.....	4232
TV86.....	3076	Visiola.....	3197
Tview.....	3079	Vision.....	3198
TVS.....	3081	Vizio.....	3211
U		Vocopro.....	3213
U. S. Electronics....	3123	Voodoo.....	3215
Uher.....	3089	Voom.....	3216
UltimateTV.....	3091	Vortec.....	3217
Ultravox.....	3095	Vortex View.....	3218
Unic Line.....	3100	Voxson.....	3220
Uniden.....	3101	W	
Unika.....	3102	Waltham.....	3230
Unitech.....	3105	Wards.....	3231
United.....	3106	Watson.....	3233
United Artists.....	3107	Watt Radio.....	3234
United Cable.....	3108	Waycon.....	3237
Universal.....	3113	Wega.....	3238
Universum.....	3115	Wegavox.....	3239
Univox.....	3116	Weltblick.....	3245
Urban Concepts..	3121	Westinghouse.....	3249
US Digital.....	3122	Wharfedale.....	3255
US Logic.....	3124	White Westinghouse	
V		3258
V2.....	3128	Windstar.....	3266
Vector.....	3136	Winegard.....	3268
Vector Research..	3137	X	
Venturer.....	3143	Xbox.....	3295
Verizon.....	3146	Xiahua.....	3299
Vestel.....	3148	Xiangyu.....	3302
Vexa.....	3149	Xingfu.....	3305
Victor.....	3155	Xinghai.....	3306
Video Concepts..	3157	XR-1000.....	3316
VIDEOLOGIC.....	3165	Xrypton.....	3317
Videologique.....	3166	Y	
Videosonic.....	3171	Yamaha.....	3326
VideoSystem.....	3172	Yamishi.....	3328
Videotechnic.....	3173	Yapshe.....	3329
Videotron.....	3175	Yokan.....	3335
Vidikron.....	3178	Yoko.....	3336
Vidtech.....	3179	Yorx.....	3340
View Star.....	3187	Yuhang.....	3345
Viewmaster.....	3182		
Viewsat.....	3185		
Viewsonic.....	3186		

Z

Zanussi.....	3349
Zenith.....	3356
Zentech.....	4031
Zentek.....	3361
Zhuhai.....	3364
ZT Group	3370



© 2009 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5265 1

www.philips.com

RTP/RR/3909

